



# Paper towel dispenser BTM installation instruction


## Installation instructions for mirror tissue box

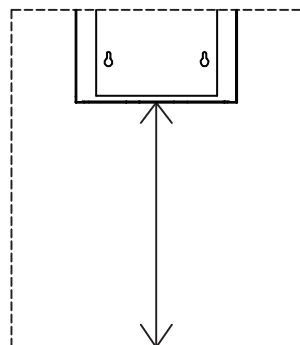


Step 1: Confirm the installation height of the product.

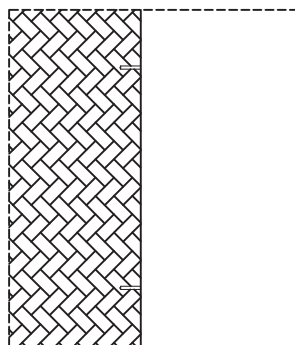

Step 2: Drill holes in the mounting location to a depth of 40mm.

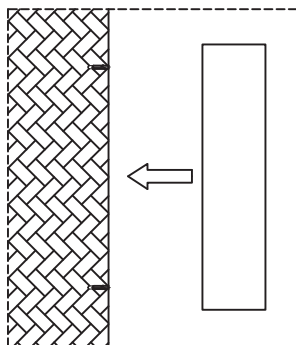

Step 3: Inject the expanding rubber particles into the holes and place the product close to the wall where the holes are drilled.

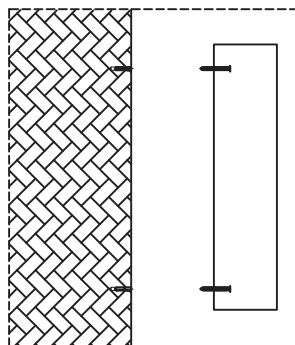

Step 4: Use self tapping screws to lock the product in the installation position.



Marker




Electric drill



Cross screwdriver

Suggested spare tools

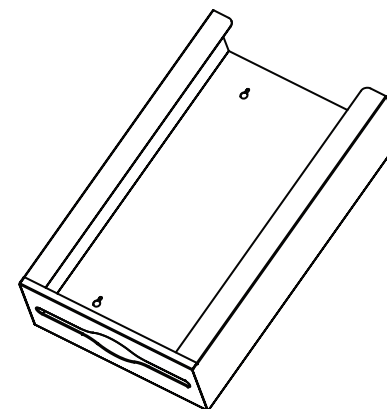

Cross recessed flat countersunk head  
tapping screws ST4\*30

**Quantity: 4 pcs**

Rubber grain  $\varnothing 6 \times 28$

**Quantity: 4 pcs**

### 1, Daily Maintenance

This product is manufactured with exquisite technology to ensure excellent quality, beauty and durability. Be careful when cleaning the product to avoid damage to the product surface. Please use water or neutral detergent to clean the surface of the product, and then wipe it with a soft towel until dry; do not use chemical or corrosive detergents or rough cloth wipe. It is recommended that the product be cleaned regularly to ensure a bright and shiny appearance. Please be careful when using acidic cleaners to clean nearby items as they may damage the surface of the product.